



CBI CARRIAGE MOUNTED CARPET AND COIL RAMS OWNER'S MANUAL

Attachment Information

Model Number: _____
 Description: _____
 Serial Number: _____
 Part Number: _____
 Date Shipped: _____

Forklift Information

Model Number: _____
 Capacity: _____
 Mounting Class: _____

Attachment ID plate:

Each CBI attachment is identified by a model number and serial number which is attached to the unit before shipment. This plate also includes rated capacity, and attachment weight.

Forklift Capacity Plate:

Forklift capacity plate should be updated to include this specific attachment. The capacity of the truck and attachment combination may be less than the capacity for the forklift only.

Safety:

- Check your equipment before you operate it.
- Never stand under attachment, or in operating range.
- When removing demountable attachments always keep hands and feet free from dangerous positions and pinch points.
- Check to ensure that attachment is securely installed on forklift before use.
- Do not use the attachment for any other purpose than indicated.

Preventative Maintenance

CBI Attachments have been constructed to require very little attention. But there are some measures which can be taken to ensure the long life of your CBI Equipment. Perform these checks before each use.

- Check mounting parts for wear, repair or replace if needed.
- Check bolts and welds for cracking and wear.
- Check for damage from previous use.
- Store unit out of the elements.

Warranty:

CBI rams are warranted for thirty(30) days. Products are guaranteed to be free from defects in material and workmanship and that, if the equipment or any part thereof is returned to an authorized dealer, transportation charges prepaid, and, if examination discloses to its satisfaction that the said equipment, part or parts has been defective in workmanship or material, CBI will deliver to purchaser without charge, transportation prepaid, parts of first class workmanship and material in exchange for any parts so found to be defective and its obligation is limited to said exchange. CBI shall not be liable for any repairs or alterations except those made with its written consent and shall not be liable for damages from delay or loss of use or for other indirect or consequential damages, losses or expenses of any kind. It is specifically agreed that the liability of CBI under all guarantees, either express or implied, is strictly limited to those terms as hereinbefore provided.

Repairs and required maintenance:

Attachments should not be disassembled without first consulting your authorized CBI Attachments dealer. Replacement parts are available, and are listed in the pages that follow.

Service and Support:

We are here to help. For information about parts, service, or a warranty claim, call 1-800-547-3131 or reach us through email at customerservice@cbimfg.com



CBI CARRIAGE MOUNTED CARPET AND COIL RAMS OWNER'S MANUAL

INSTALLATION INSTRUCTIONS

Before installing the CBI ram Attachment on your lift truck, visually check ram to see that all welds are intact, and that mounting hardware has not become damaged, lost or loosened. Also inspect your forklift carriage to ensure that it is undamaged and suitable for use with the attachment.

- Remove lower lug from ram if necessary.
- Hang attachment on forklift carriage by top lugs.
- If bottom lug is not removable, be sure that the lug is positioned to fit through the bottom notch on the carriage bar. Adjust on carriage to secure bottom lug with bar.
- Install bottom lugs with bolts or QD pins as necessary.
- ENSURE ATTACHMENT IS ATTACHED SECURELY TO FORKLIFT CARRIAGE. CHECK THAT ALL MOUNTING PARTS ARE PROPERLY INSTALLED.

BEFORE OPERATION.

1. Double check that the attachment is flat against the carriage bars, and secure on the forklift.
2. Review ram capacity to ensure the ram can lift the desired load at the desired distance safely.
3. Review forklift capacity plate for rated capacity with attachment at the load center distance and raised height to ensure the forklift can lift the desired load safely. Do not exceed capacity rating on either truck or attachment.
4. Do not use the ram if it has been damaged.
5. Tilt mast back toward driver. NEVER tilt mast top forward as load may shift or slip off ram.
6. The ram should appear secure and stable. If unusual movement or sound is observed prior to, or during use, discontinue use, remove the unit, and notify your supervisor.

OPERATION

1. Line up the ram pole carefully with core. Misalignment may result in damaged product.
2. Insert the ram fully into the core until the load contacts the bumper plate.
3. Lift the load slowly. Raise the load to transporting height, keeping load as close to the ground as possible without contacting.
4. Transport the load to the desired location. Move slowly and avoid all bumps and inclines/declines. Ensure all personnel are clear of the area.
5. Raise/Lower the load into the desired position. Lower load slowly into place, and remove ram from the core.

CAUTION

1. Never overload the forklift or attachment.
2. Don't ride, sit, or stand on ram.
3. Never leave elevated loads unattended.
4. Do not modify the attachment in any way without written approval from CBI. Doing so will void the warranty, and possibly render the attachment unsafe.

NOTES

1. Compliance with laws, regulations, codes, and non-voluntary standards enforced in the location where the attachment is used is exclusively the responsibility of the owner/end-user.
2. CBI is not liable for any injury, or property damage that occurs as a result of failing to apply the instructions in this manual and information on product/forklift tags.